

### Vokera Gas Boiler Reset instructions

To reset turn the dial (in Red Below) anticlockwise until the reset symbol. Once off, wait a few second and bring the dial back up to between 65 and 70 degrees

